

New Features in ibaHD v2.3.0


1/3/2019 iba Gent

Ta	h	ما	Ωf	Co	nte	nte
10			UI.	\mathbf{v}	IIIC	HLO

1 ibaHD user management......2

1 ibaHD user management

Until now, it was only possible to grant ibaPDA client permissions for ibaHD users. To offer a better protection of the data stored in an ibaHD server, the permissions of these users have been extended with reading and writing rights for the ibaHD stores, as well as a permission which allows to configure them. User administration can be done either through the ibaPDA client (which still is the only option for previous versions of ibaHD) or via the newly added user management tab in the ibaHD Manager.

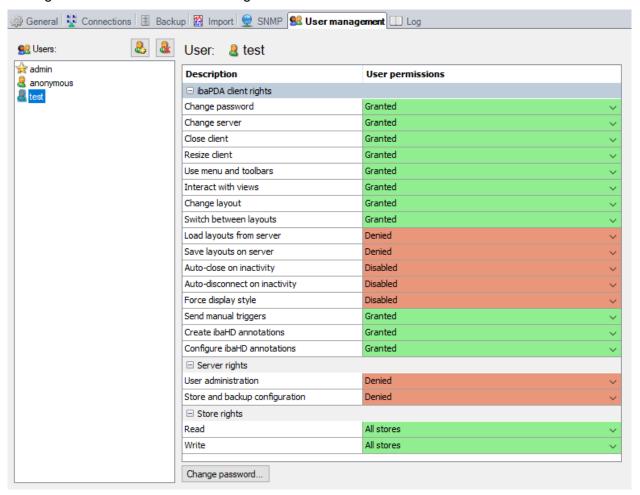

Once a user is selected in the list on the left, its permissions will be shown in a grid on the right. The permissions are divided into 3 categories, namely the ibaPDA client permissions, the server permissions for the ibaHD server and the ibaHD store permissions. The store permissions can be granted or denied on a per-store basis. The option 'All stores' allows a user to read and/or write to all stores, even to those which are not yet available at the time of configuring the user permissions. Because it is possible to protect the data of ibaHD stores from now on, new versions of other iba products (ibaPDA, ibaDatCoordinator, ibaAnalyzer and ibaFiles) have been extended with options to provide the required credentials to read and/or write from these stores.

However, in certain cases it might still be desirable that older versions of these products still have access to the data of certain stores. Therefore, we added the special user 'anonymous'. By configuring the store permissions for this user, you can grant or deny older products to read from and/or write to a selection of stores. An exception to this rule is older ibaPDA clients, though this should not be an issue as they already used to provide options to enter ibaHD user credentials.

2/3

ibaHD v2.3.0 New Features

As a side note, because certain actions (e.g., configuring stores or backups) are protected with user permissions, controls have been provided in the ibaHD Manager which allow you to login as a certain user and see its connection status (as shown below).

