



New Features in ibaLogic v5.0.3

Author: ibaAG Fürth

Date: 02/03/2016


Content

1	HW output variables support default values	3
2	ibaMS8xIEPE module for PADU-S-IT-2x16 supported.....	3

1 HW output variables support default values

It is now possible to set the current value and default values of not linked hardware output signals.

A double-click on the output connector will show following dialog:

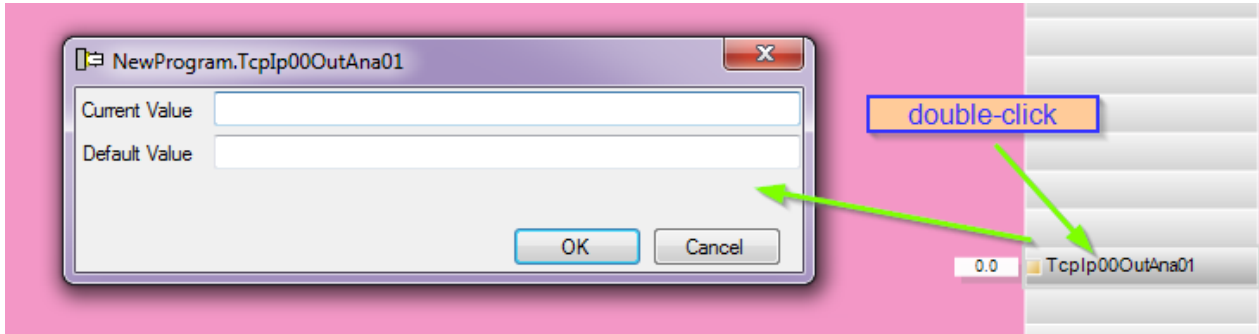

The current value and also the default value (value at start of evaluation) can be set.

When a link to the hardware output signal is added, then these values will be overridden.

2 ibaMS8xIEPE module for PADU-S-IT-2x16 supported

The new module für vibrations measurement is now integrated in PADU-S-IT-2x16 and can be used in ibaLogic.